




**f) EM108RRB Roof Rail Bracket**

Part No. EM108RRB

Fixing: Permanent



<u>Quantity</u>	<u>Description</u>
8	M8 Nyloc Nuts
8	M8 x 20 Ring Washer
8	M8 x 25 Coach Bolt
4	M6 x 60 Security bolt
8	M6 x 20 Ring Washer
4	M6 Nyloc Nuts
1	Allen Key Security 4mm
2	Roofrail Bracket (Stainless Steel)

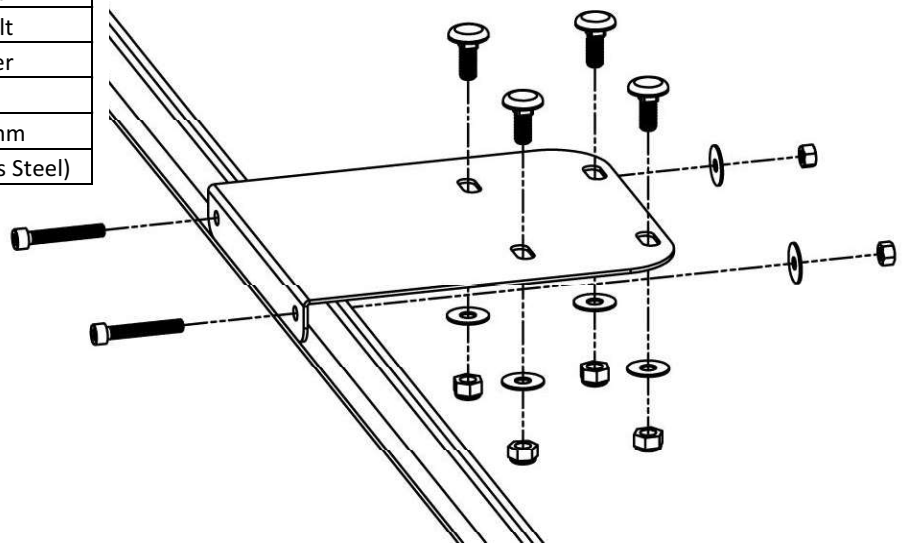

**Installation instructions:**

- i. Mount Stainless Steel Roofrail bracket to base of Lightbar in above orientation using M8 Coachbolt, Ring Washer and Nyloc nuts.
- ii. Ensure mounting bracket hooks over roofrail appropriately and is flush with outer edge
- iii. Drill through the roofbar using 6.5mm (recommended) drill bit.
- iv. Secure with the M6 security bolts and associated fixings.
- v. Repeat on opposite side of the Lightbar.